



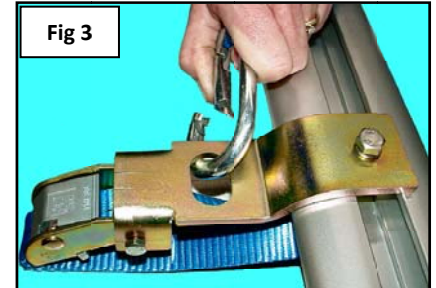

Installation of Rear Camloc Restraint for Ladder Rack

- 1: Insert an M8 x 20 x 34 channel nut into the top recess of the rear crossbar centrally between the rails (**Fig 1**).
- 2: Place the camloc on the top recess of the crossbar inline with the channel nut. Tighten the camloc restraint using the M8 x 20 SS hex head bolt & spring washer so that the channel nut is fully located across the crossbar (**Fig 2**).
- 3: Wrap the snap hook end of the strap over the ladder rungs. Snap the hook onto the camloc mount (**Fig 3**) ensuring it is fully closed. Pull the strap to tighten around the ladder rung. Check the ladder is secure.

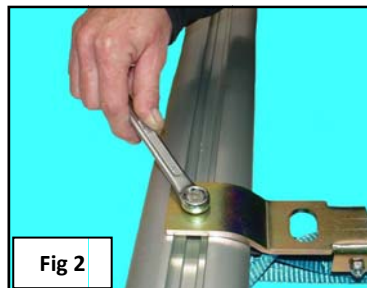

- 4: To release the ladder, press the cam buckle and pull the strap back through the buckle and unhook the snap hook.
- 5: Place clear silicon sealant on the end of the crossbar and then gently tap in the end caps provided using a soft hammer. Wipe off any excess sealant with a clean rag (**Fig 4**).

