


Gripper

Mercedes Vito Gripper Rear Step

1. Locate mounting holes underneath vehicle (**Fig 1**). Note on the drivers side there is a tow hook installed. This must be removed prior to installing rear step (**Fig 1a**).



2. The step outriggers come in pairs (left & right). When mounting ensure they are positioned correctly underneath vehicle. The holes on the outriggers must line up with the three (3) mounting holes on vehicle (**Fig 2**). The outriggers are secured to vehicle using 3 x M12 x 90 ZP HT 8.8 bolts, 6 x flat washers and 3 x nyloc nuts.
3. Locate vehicle holes and position outrigger in place (**Fig 3**). Any sealant found around where the outrigger is to be positioned, must be removed. Place M12 x 90 ZP HT 8.8 bolt and flat washer through first hole and then place another washer over bolt (**Fig 4 & 4a**). Repeat step for the other two (2) bolts/holes. Once the outrigger is correctly positioned, place M12 nyloc nuts on bolts and lightly tighten (**Fig 5 & 5a**). This allows for the correct positioning of the step frame (**More pictures on page 2**).

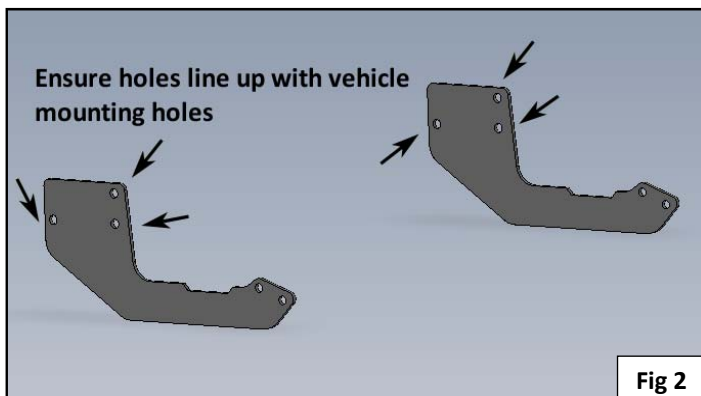

Contact details for KRS Racks


Tel: +61 8 8363 5770, Email: enquiry@krsracks.com, Web: www.thekineticsgroup.net

Gripper

Mercedes Vito Gripper Rear Step



4. Repeat process for other outrigger.
5. With the assistance of another person, position step frame (**Fig 6**) onto outriggers. Ensure holes on step frame lugs line up with the holes on outriggers. The outrigger must be positioned to the outside of the step frame lug (**Fig 7**).

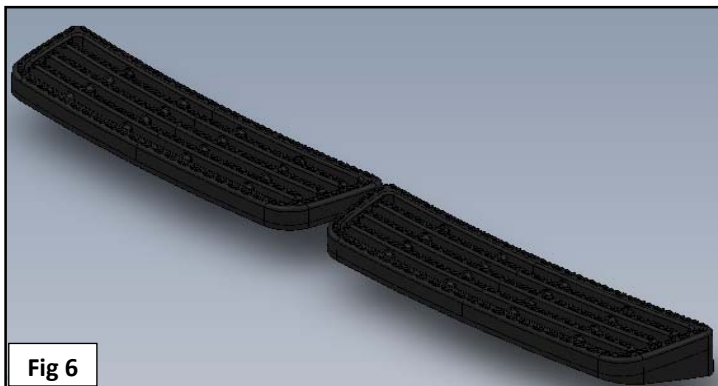



Contact details for KRS Racks

Tel: +61 8 8363 5770, Email: enquiry@krsracks.com, Web: www.thekineticsgroup.net

Gripper

Mercedes Vito Gripper Rear Step

- Place 1 x M12 x 30 black ZP HT 8.8 bolt and black washer through first hole and then place another black washer over bolt (**Fig 8**). Repeat step for the other three (3) bolts/holes. Once the step frame is correctly positioned, place M12 nyloc nuts on bolts and securely tighten (**Fig 9**).

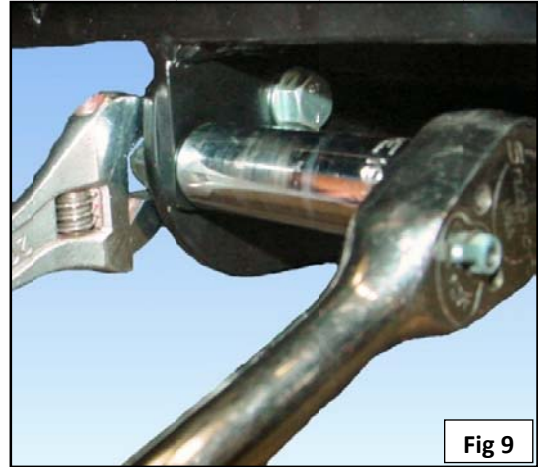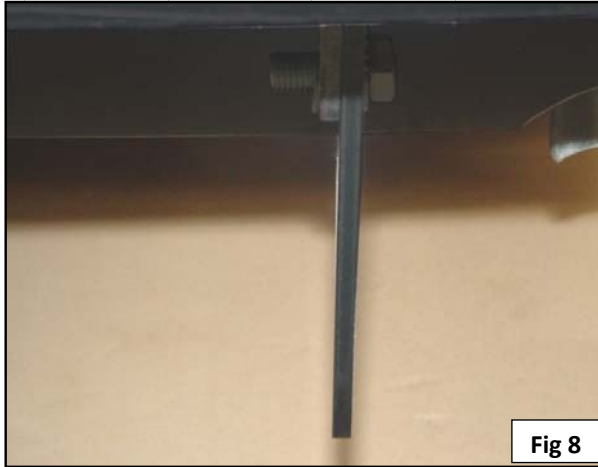

- Securely tighten the remaining 6 x M12 x 90 ZP HT 8.8 bolts, 6 x flat washers and 3 x nyloc nuts used to secure the outriggers to the vehicle.
- The step should look as per (**Fig 10**).



Contact details for KRS Racks

Tel: +61 8 8363 5770, Email: enquiry@krsracks.com, Web: www.thekineticsgroup.net