



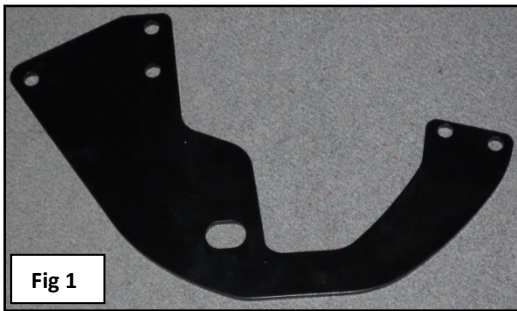


Mercedes Vito Gripper Step Fitted to Genuine Towbar

1. Locate the existing towbar fixings underneath the vehicle. The outriggers (**Fig 1**) are secured to the vehicle using these fixings.
2. When mounting the outrigger ensure they are positioned correctly. The holes on the outrigger must line up with the three (3) bolts securing the towbar to the vehicle. Remove the three (3) x M12 nuts, spring and flat washer and place the outrigger over the bolts. Place flat/spring washer and M12 nut on all three (3) bolts and lightly tighten (**Fig 2**) (**Fig 2a**). This allows for the correct positioning of the step frame.





3. Repeat for other outrigger.
4. With the assistance of another person, position step frame (**Fig 3**) onto outriggers. Ensure holes on step frame lugs line up with the holes on outriggers. The outrigger must be positioned to the outside of the step frame lug (**Fig 4**)

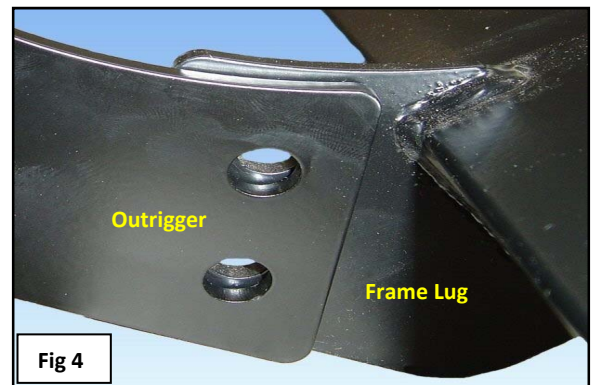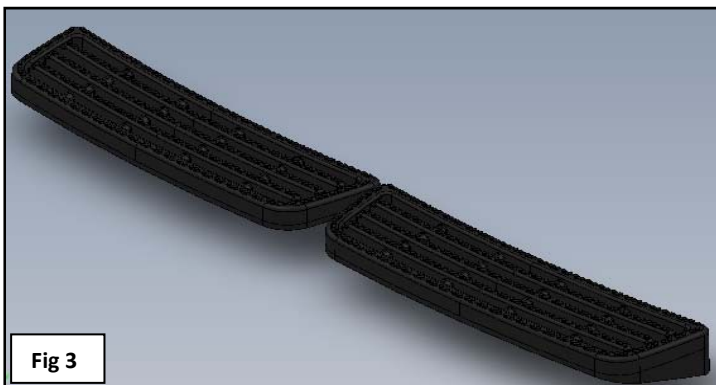

5. Place one (1) x M12 x 30 black ZP HT 8.8 bolt and black washer through first hole and then place another black washer over bolt (**Fig 5**). Repeat step for the other three (3) bolts/holes. Once the step frame is correctly positioned, place M12 nyloc nuts on bolts and securely tighten (**Fig 6**). **Refer photos on next page**

Gripper

Mercedes Vito Gripper Step Fitted to Genuine Towbar

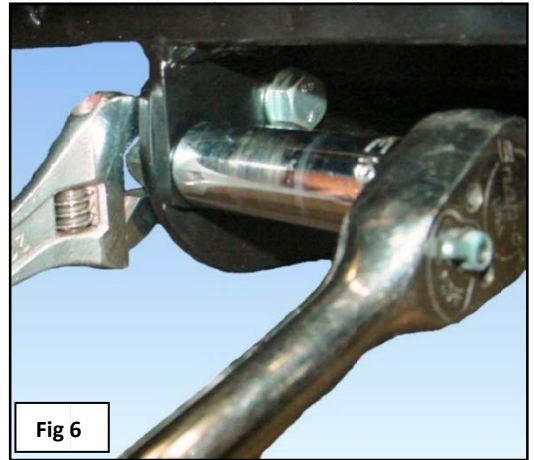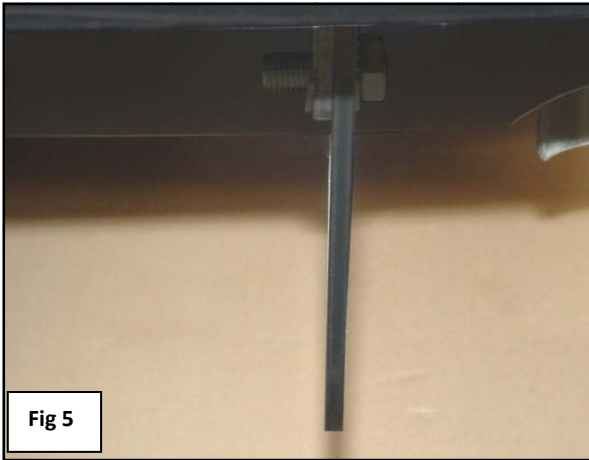

6. Securely tighten the remaining six (6) x bolts, six (6) x flat & spring washers and six (6) x nuts used to secure the outriggers to the vehicle.
7. Replace original towbar tongue with extended tongue supplied. Note the tow ball needs to be removed from the original tongue and placed on the extended tongue. The step towbar should look as per (Fig 7).

